

1/16 x 1/2 (17)

Brake Cross-shaft Brkt Nuts
Equalizer Shaft
Hand Brake Lever Bracket
Hand Brake Lever Retract Spring
Rear Motor Mount Bolts

3/32 x 1/2 (5)

Clutch Pedal Shaft Collar Pin
Front Radius Rod Retaining Pin
Hand Brake Lever Pawl
Hand Brake Lever Pawl Pin
Hand Brake Lever Rod

3/32 x 3/4 (43)

Backing Plate Bolts (Rear)
Brake Wedge (Front) Stud/Nut
Engine Main Bolt / Nuts
Fan Shaft/Nut
Front Engine Mount Yoke Stud
U-Bolt Nuts - Front Spring
King Pin Locking Pin/Nut
Pitman Arm Bolt / Nut
Spring Shackle Nuts
Steering Box to Frame Bolts
Tie Rod End Bolts/Nuts

1/8 x 5/8 (16)

Brake Pedal Clevis Pin
Brake Pedal Rod - Cross shaft Pin
Brake Pedal to Eq Shaft (1928)
Brake Rod Clevis Pins
Clutch Adjusting Yoke Pin
E-Brake Lever to Cross Pin
Hand Brake Lever Pawl Pin

1/8 x 1" (12)

Steering Arm Nut
Front Spring Perch Nut
Radius Rod Bolt (at Torque Tube)
Rear Axle Shaft / Drum
U-Bolt Nuts - Rear Spring
Starter Rod (-on 1928 only)

1/8 x 1-1/2 (6)

Drag Link End Plug
Tie-Rod End Plug

3/16 x 1" (1)

Flywheel Housing Hole

3/32 x 5/8 (34)

Backing Plate Bolts (Front)
E-Brake Toggle Link
Engine Connecting Rods
Hand Brake Lever Arm
Hand Brake Lever Sector
Radiator Mounting Bolts
Shock Arm Bolts
Tail Pipe Clamp Bolt
Throttle Assy Bellcrank Lever
U-Joint Cap Bolts

3/32 x 1" (3)

Driveshaft Pinion Castle Nut
Front Radius Ball Cap Studs

1/8 x 3/4 (16)

Brake Shoe Roller Pins

1/8 x 1-1/4 (6)

Sidemount Arm Nut
Shock Link Plug

5/32 x 1" (2)

Front Wheel Bearing Nut