METHOD SHEETS

Vehicle Tested On	Date:	10/28/2013
1936 Ford PU	Rev:	Original
	Author:	NormC

Information	
Year:	1936
	Passenger/Commercial

Operation: **Brake Cross Shaft Assembly Removal**

Step	Description		Picture
1	Remove brake cross shaft assembly: Remove the brake pedal, handbrake and front brake linkage from the cross over shaft assembly by means of removal of cotter pins and pins, 4 locations.		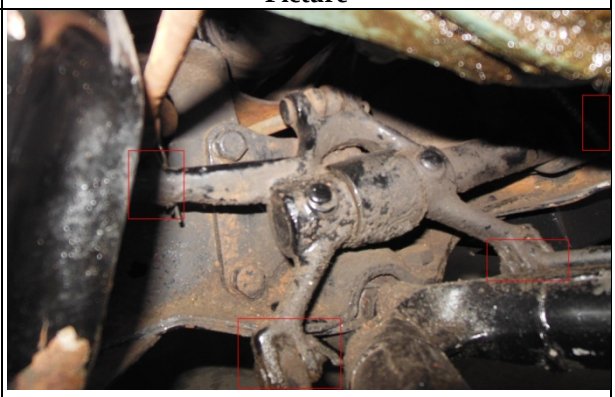
2	Remove cotter pin from the rear brake linkage attach pin. Do not remove the pin at this time. There is a brake return spring attached this upper pin.		
3	Remove the 4 attach bolts from the shaft assembly.		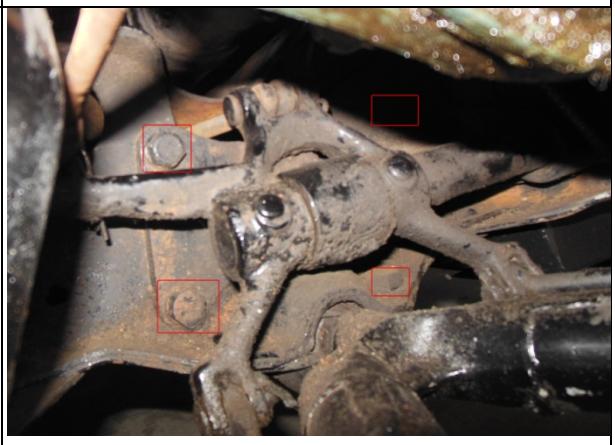

METHOD SHEETS

Vehicle Tested On	Date:	10/28/2013
1936 Ford PU	Rev:	Original
	Author:	NormC

Information	
Year:	1936
	Passenger/Commercial

Operation: **Brake Cross Shaft Assembly Removal**

Step	Description		Picture
4	Tilt the lower portion of the shaft assembly forward to relieve the spring tension. Remove the remaining pin. No further components require removal to remove the assembly. A little twisting here and there and the housing will come out on the right hand side.		