






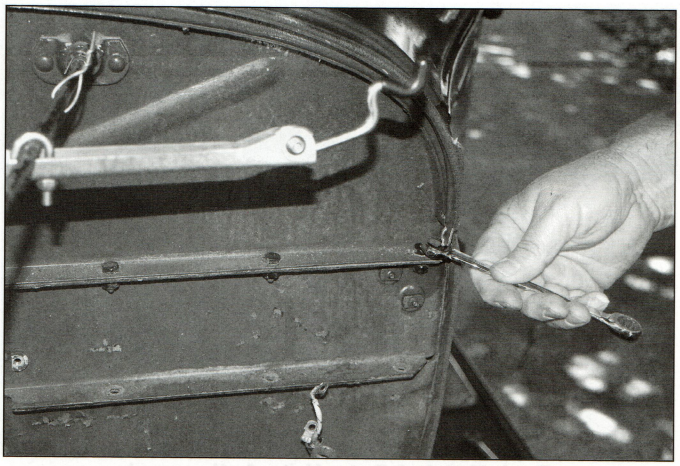

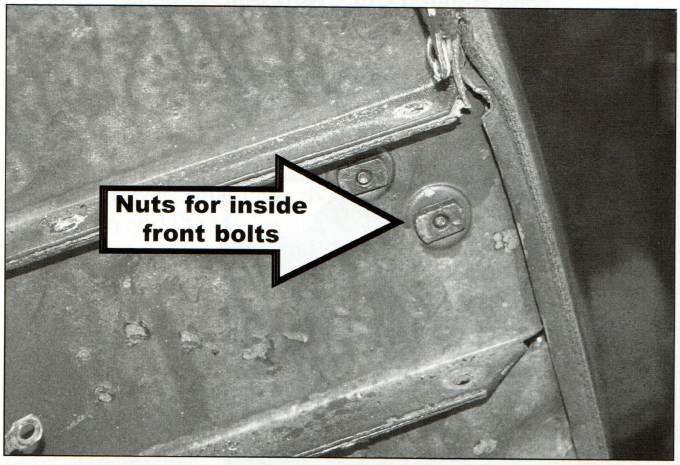

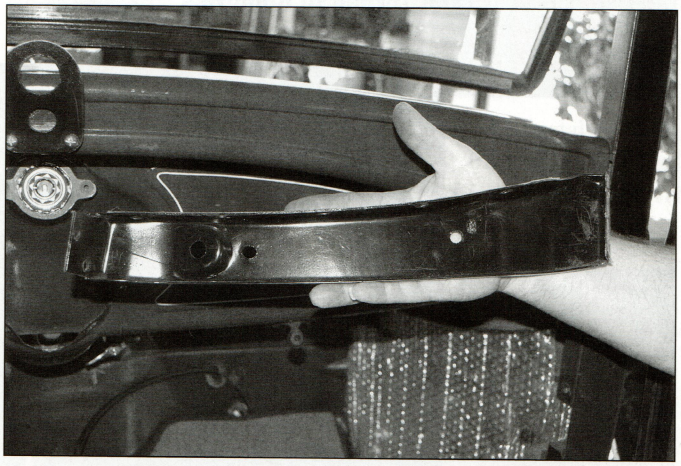

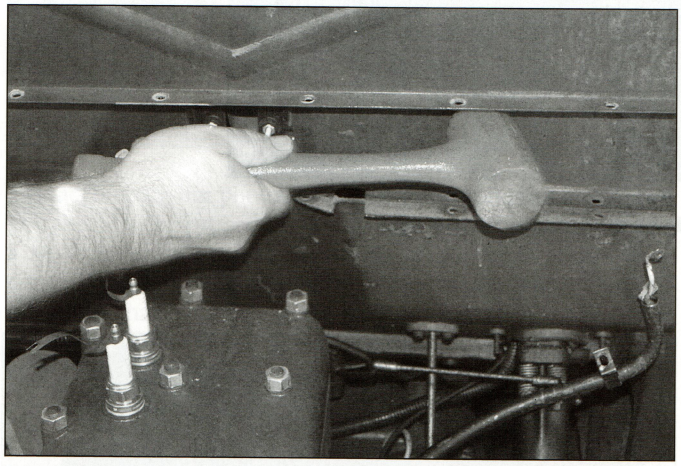

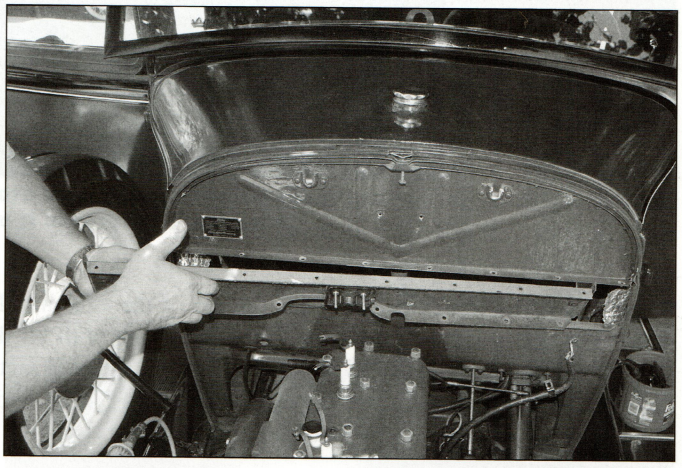

20. The tank may now be removed; this is a two person job, one on the inside and one on the outside of the car. The tank will be loosened at the filler neck and move down and then rearward inside the car. It may be necessary to tap lightly on the filler neck, rotating the tank away from the steering column assists in removal



