
Model A Ford
DISTRIBUTOR ASSEMBLY
1928-1931

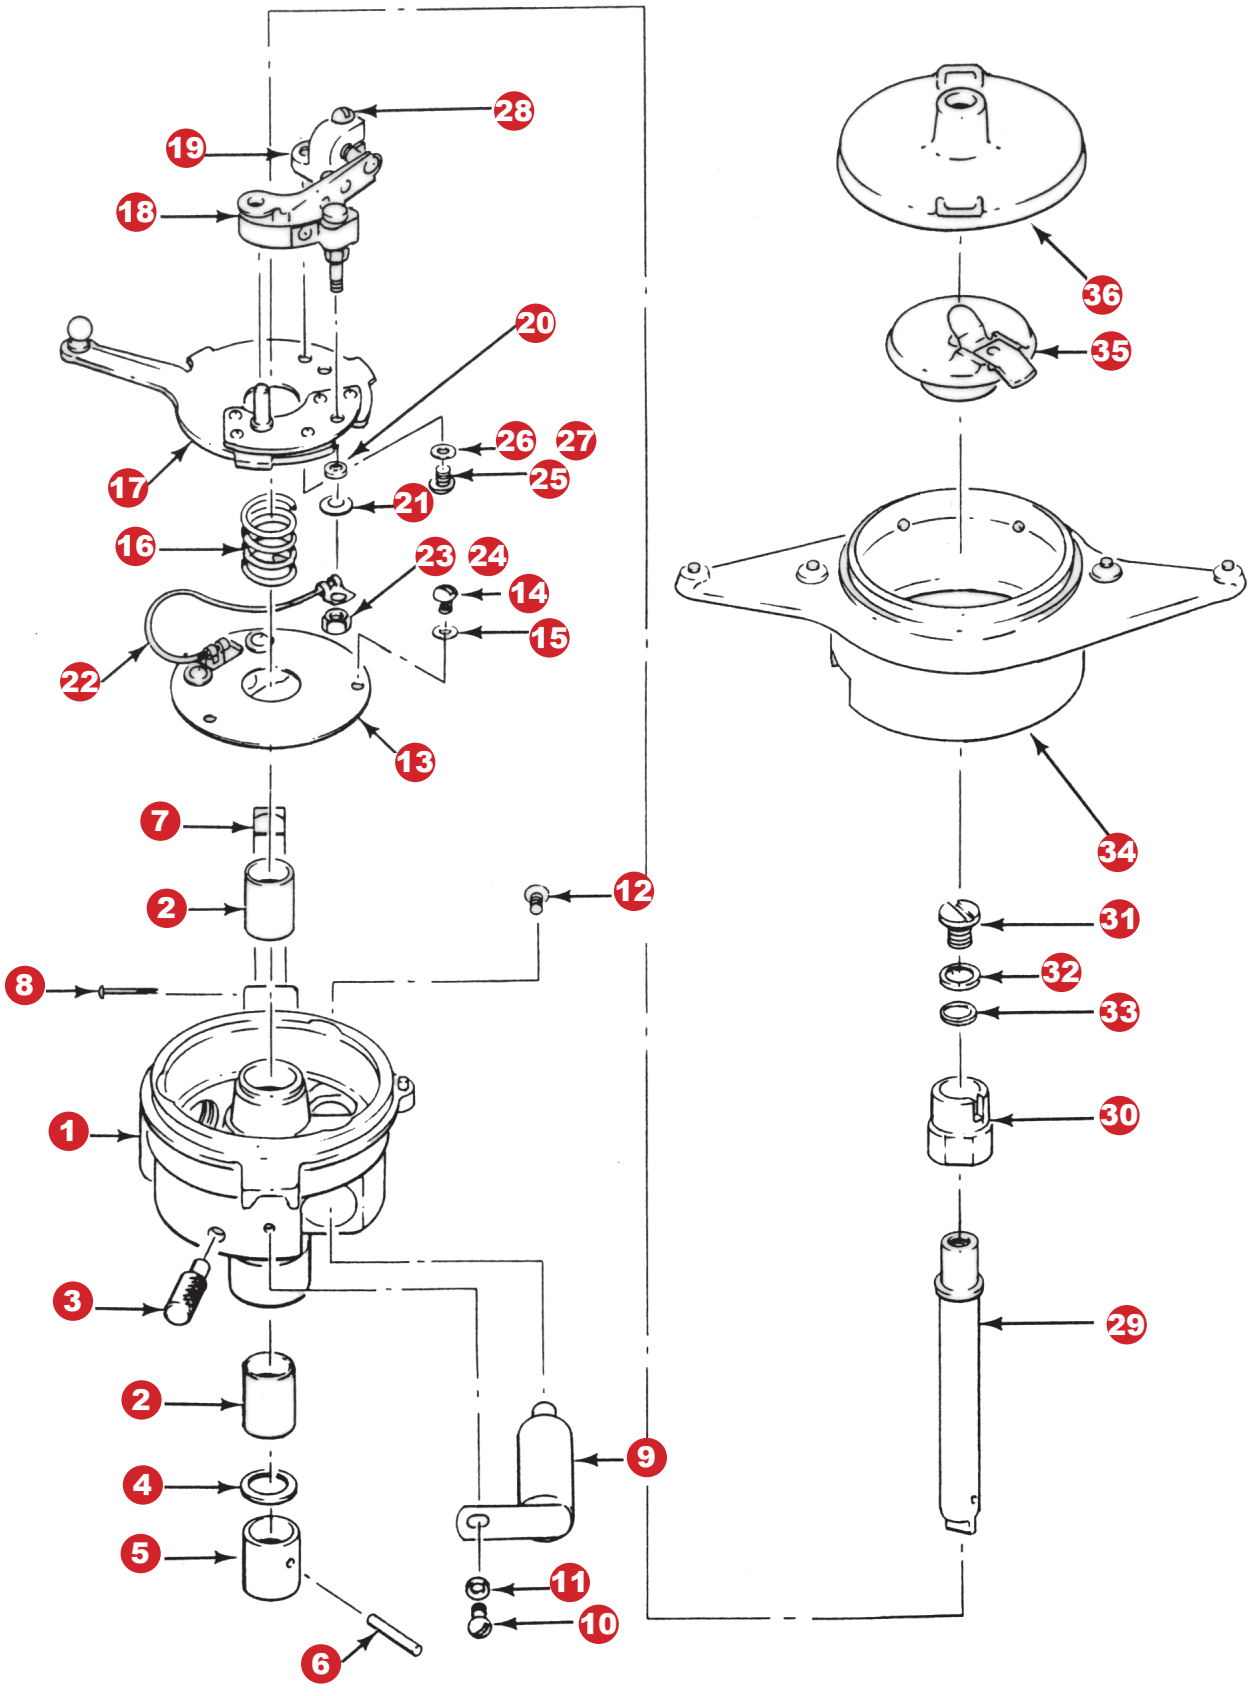

CLICKING ON THE RED NUMBERS OR CIRCLES WILL TAKE YOU TO THE PRODUCT DESCRIPTION AND QUICK ORDER FORM

Index #	*Part #*	*Description*	*# Required*
1	***A-12130-H***	Distributor Housing	1
2	***A-12132***	Shaft Bushings	2
3	***A-12135***	Oiler	1
4	***A-12181***	Thrust Washer	1
5	***A-12195***	Shaft Sleeve	1
6	***A-12196***	Sleeve Pin	1
7	***A-12144-S***	Clamps	2
8	***A-12145***	Clamp Rivets	2
9	***A-12300-SP***	Condenser	1
10,11	***A-12127-MB***	Screw & Lock Washer (part of ***A-12127-MB***)	1
12	***A-12300-MS***	Copper Screw	1
13	***A-12148-X***	Lower Plate Assembly	1
14,15	***A-12127-MB***	Screw & Lock Washer (part of ***A-12127-MB***)	2
16	***A-12137***	Spring	1
17	***A-12151-P***	Upper Plate Assembly	1
18	***A-12199***	Points	1
19	***A-12160***	Point Block	1
20	***A-12127-MB***	Insulating Washer (part of ***A-12127-MB***)	1
21	***A-12199-W***	Insulating Washer	1
22	***A-12148-W***	Pigtail Wire	1
23,24	***A-12127-MB***	Screw & Lock Washer (part of ***A-12127-MB***)	1
25-28	***A-12127-MB***	Hardware (part of ***A-12127-MB***)	1
29	***A-12178-S***	Upper Shaft	1
30	***A-12210***	Cam	1
31,32	***A-12211/13***	Cam Screw & Lock Washer	1
33	***A-12180***	Thrust Washer	1
33	***A-12181***	Thrust Washer	1
34	***A-12105***	Distributor Body	1
35	***A-12200***	Rotor	1
36	***A-12115***	Distributor Cap	1
	A-12127-MB	Hardware Kit	1