
GENERATOR ASSEMBLY

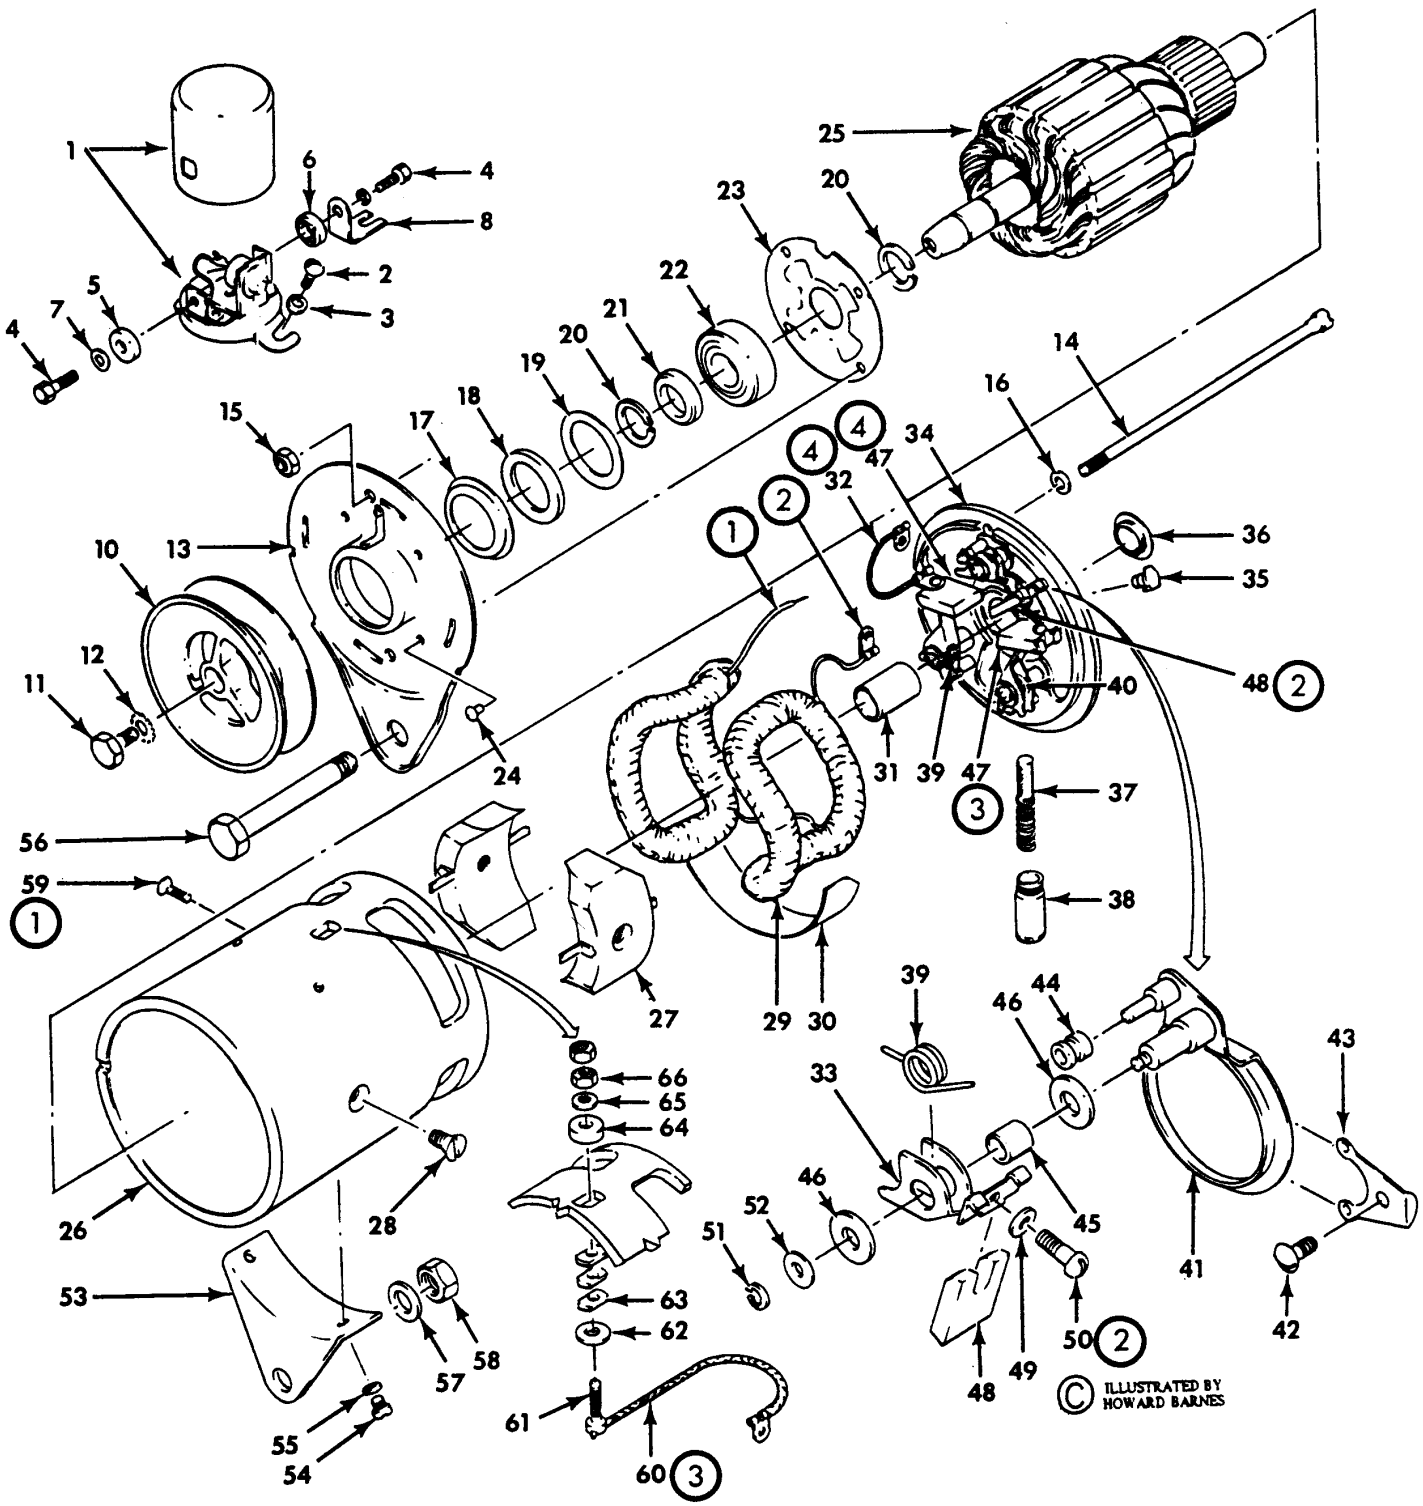

Index #	Part #	Description
1	A-10505	Cut-out
2.3	A-10505-MB	Cut-out Mounting Hardware
4,7	A-10564	Cut-out Screws
5,6	A-10563	Cut-out Insulating Washers
8	A-10550	Connector
10	A-10130-B	Pulley
11,12	A-10143-A or B	Pulley Mounting Hardware
13	Not Avail.	Front End Plate
14	A-10166	1/4-20 x 6” Fillister Head Bolt
15	Not Avail.	1/4-20 Hex Nut
16	Not Avail.	1/4’ Lock Washer
17	A-10113	Bearing Felt Retainer
18	A-10160	Bearing Felt
19	A-10114	Bearing Washer
20	A-10099	Retaining Ring
21	A-10097	Bearing Spacer
22	A-10094	Bearing
23	A-10098	Bearing Retainer Plate
24	A-8140-MB	Plate Mounting Hdwe.
25	Not Avail.	Armature
26	Not Avail.	Generator Case
27	Not Avail..	Field Coil Mounting Shoes
28	A-11086	Pole Screws
29	A-10000-F	Field Coils
30	A-10193	Field Insulator
31	A-10128	End Plate Bushing
32	A-10108	Ground Lead
33	A-10051-C	Brush Holder
34	A-10129-BR	Rear End Plate
35	A-10141	Oiler
36	A-10149	Bearing Plug
37	A-10145	Wick/Spring
38	Not Avail..	End Plate Oiler (30-31)
39	A-10057	Brush Spring
40	Not Avail.	Main Brush Spring
41	A-10072	3rd Brush Plate Assy.
42	Not Avail.	8-32 x 1/4” Round Head Screw
43	A-10075-A or -B	Retaining Spring
44	A-10049	Stop Pin Insulator
45	A-10048	Brush Holder Bushing
46	Not Avail.	Insulator Washer
47,48	A-10043	Generator Brush Set
49	Not Avail.	#8 Lock Washer
50	Not Avail..	8-32 x 1/2” Fillister Screw
51	A-10076	Stud Clip
52	Not Avail.	#8 Flat Washer
53	Not Avail.	Generator Support
54	Not Avail.	1/4-28 x 7/16” Fillister Screw
55	Not Avail.	1/4” Lock Washer
56,7,8	A-10151	Pivot Bolt Kit
59	Not Avail.	Screw & Nut for ground field coil wire [1] inside case.
60	A-10102	Terminal Wire
61	A-10101-B	Terminal Bolt
62	A-10106	Insulator (Square Hole)
63	A-10104-B	Insulator
64	Not Avail.	Insulator Washer
65,66	Not Avail.	10/32 Nut & #10 Washer

HOOK-UP INSTRUCTIONS

[1] Field coil wire attaches to ground screw #59 or under terminal bolt #61..

[2] Field coil wire attaches under brush screw #50

[3] Terminal and lead Assembly wire attaches under insulated Main brush screw #47

[4] Brush to ground lead assembly #32 attaches to generator

- Main brush #47 and to 3rd brush plate retainer spring screw #42