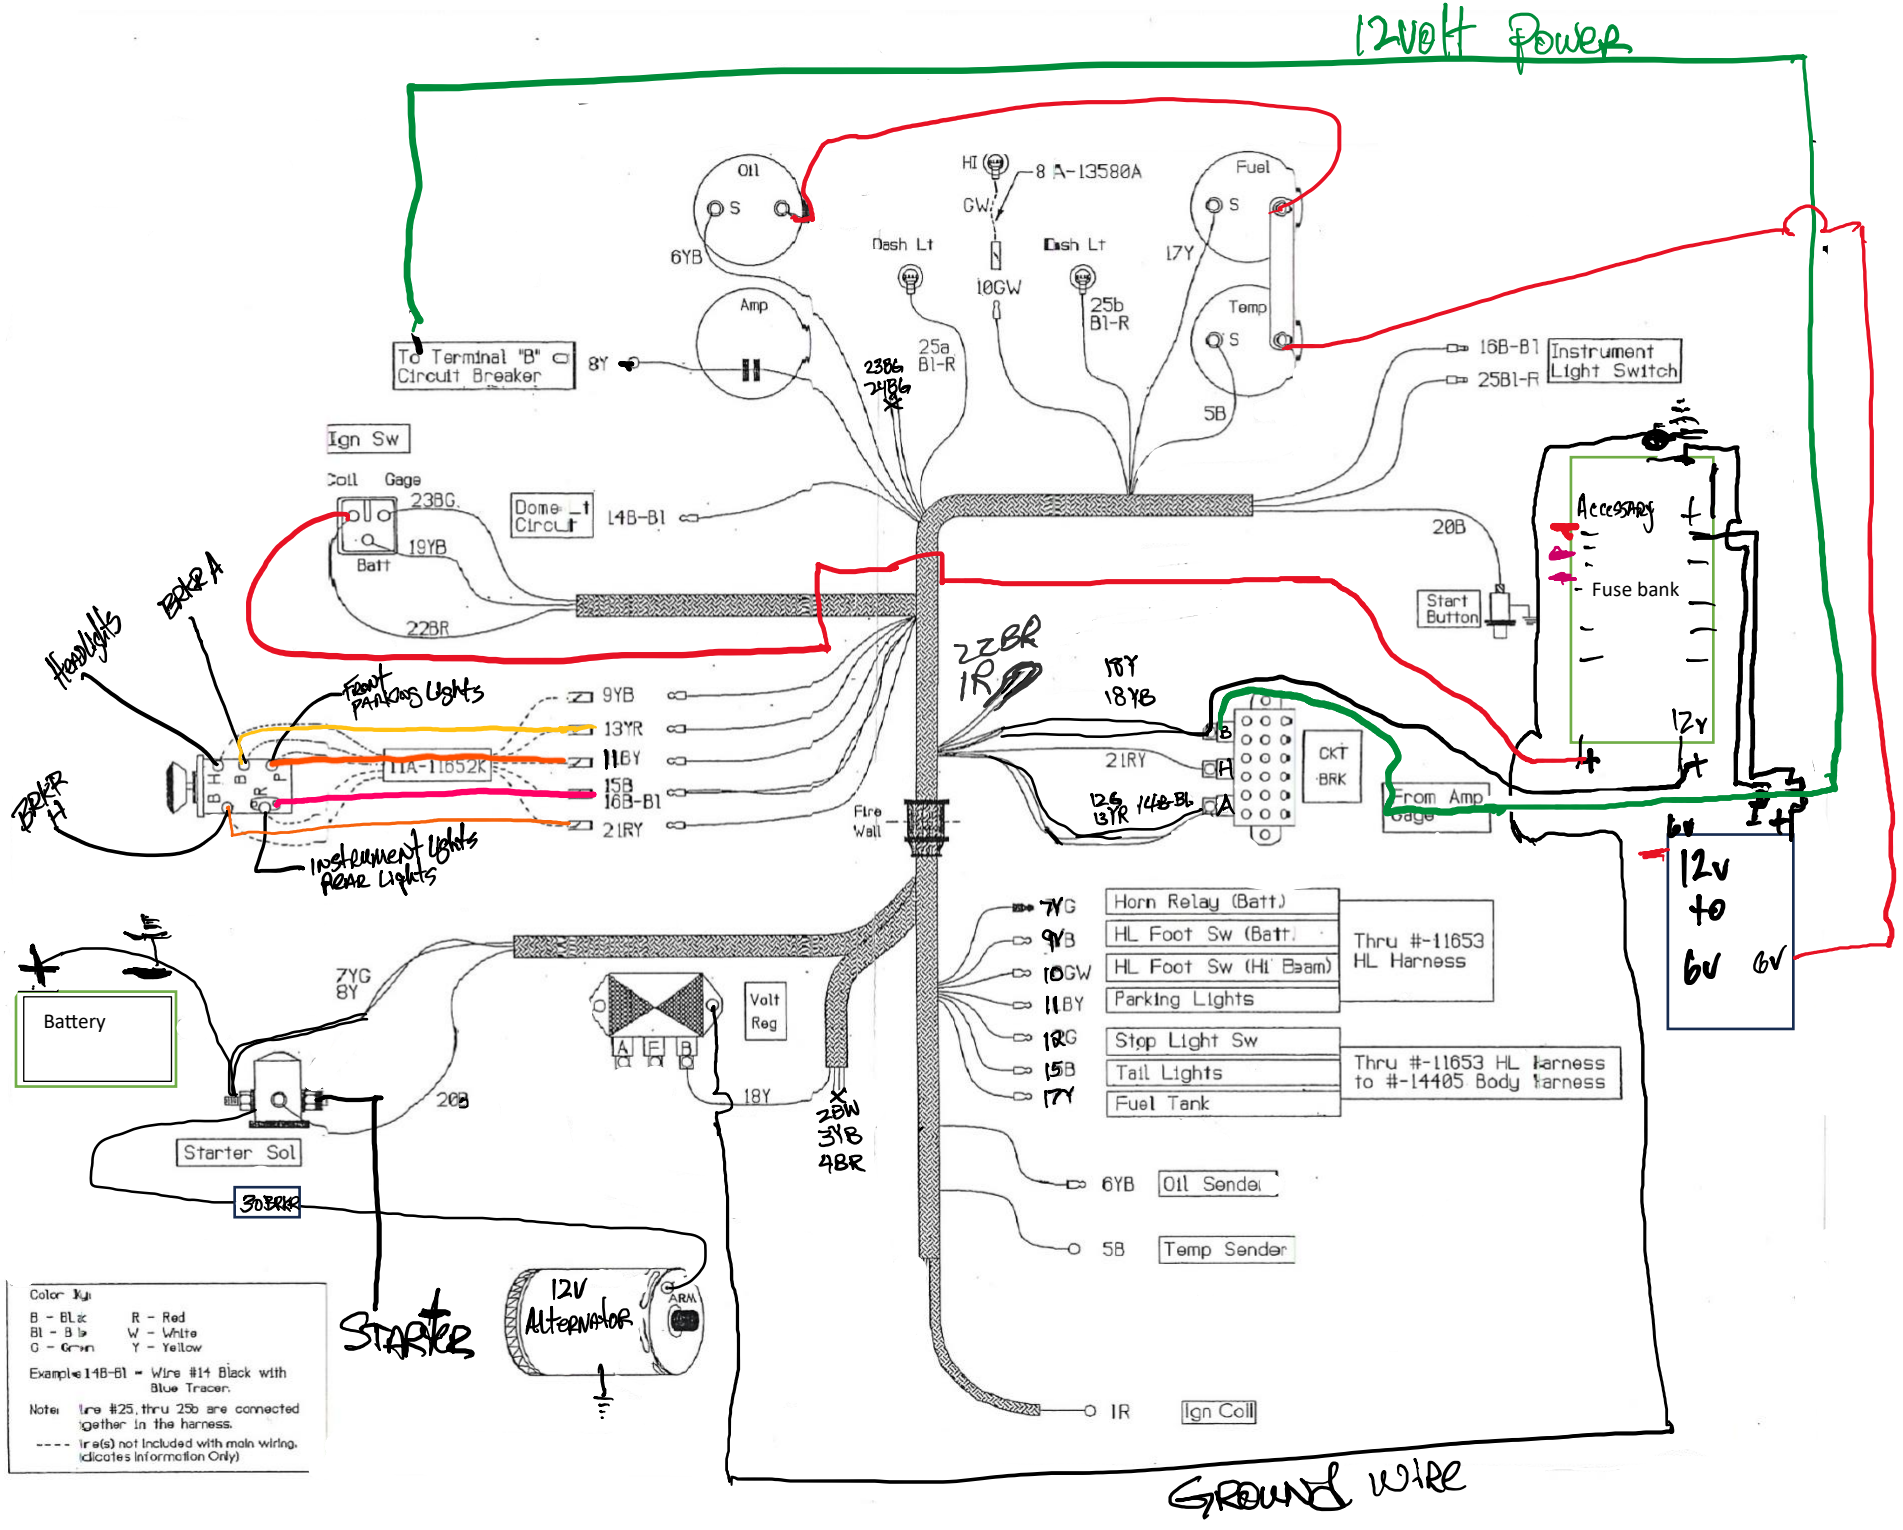

12Volt Power
Oil
S
6YB
Amp
HI
8 A-13580A
GW
10GW
Dash Lt
Dash Lt
25a B1-R
25b B1-R
Fuel
S
17Y
Temp
S
5B
To Terminal "B" Circuit Breaker
8Y
Ign Sw
Coil
Gage
Batt
238G
19YB
Dome Circuit
14B-B1
22BR
16B-B1
25B1-R
Instrument Light Switch
20B
Start Button
Accessory
Fuse bank
12V
Headlights
Brkr A
Brkr B
Front Parking Lights
11A-11652K
9YB
13YR
11BY
15B
16B-B1
21RY
Instrument Rear Lights
Fire Wall
22BR
1R
18Y
18YB
21RY
12G 13YR
14B-BL
CKT BRK
From Amp Gage
12V to 6V 6V
Battery
7YG
8Y
20B
Starter Sol
30BRR
Volt Reg
18Y
28W
31B
48R
7YG
Horn Relay (Batt)
9YB
HL Foot Sw (Batt)
10GW
HL Foot Sw (Hi Beam)
11BY
Parking Lights
18G
Stop Light Sw
15B
Tail Lights
17Y
Fuel Tank
Thru #-11653 HL Harness
Thru #-11653 HL Harness to #-14405 Body Harness
6YB
Oil Sender
5B
Temp Sender
1R
Ign Coil
STARTER
12V Alternator
ARM
Color Key
B - Black
Bl - Blue
G - Green
R - Red
W - White
Y - Yellow
Example 14B-Bl = Wire #14 Black with Blue Tracer.
Note: Wire #25, thru 25b are connected together in the harness.
---- Wire(s) not included with main wiring. (Indicates information Only)
Ground Wire