1939 Ford Deluxe

Wire from Starter Button
To Starter Solenoid Black

Wire to Voltage Regulator
BAT terminal Yellow/Black

Hot Wire from BAT
Side of Starter Solenoid
Yellow

Wire from Coil Resistor
To Coil Red

Wire to Pillar Lights Switch
Black/Blue

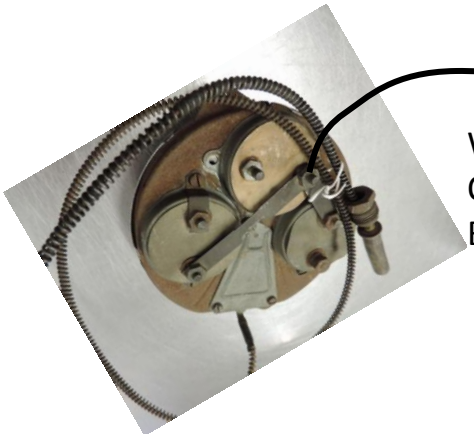

Wire to Dash Gauges
Oil Pressure terminal
Black/Green

Wire to Lighting Switch
At base of Steering
Column. Yellow/Red

Wire to Coil Resistor
From Coil terminal
Black/Red

Wire to Cigar Lighter
Yellow/Green

Gauge Wires:
Battery Indicator – Wire to Ground
Fuel Level Indicator – Yellow to Sender
Oil Pressure Indicator – Black/Yellow to Sender

Wire to Ignition Switch
BAT terminal Yellow/Black