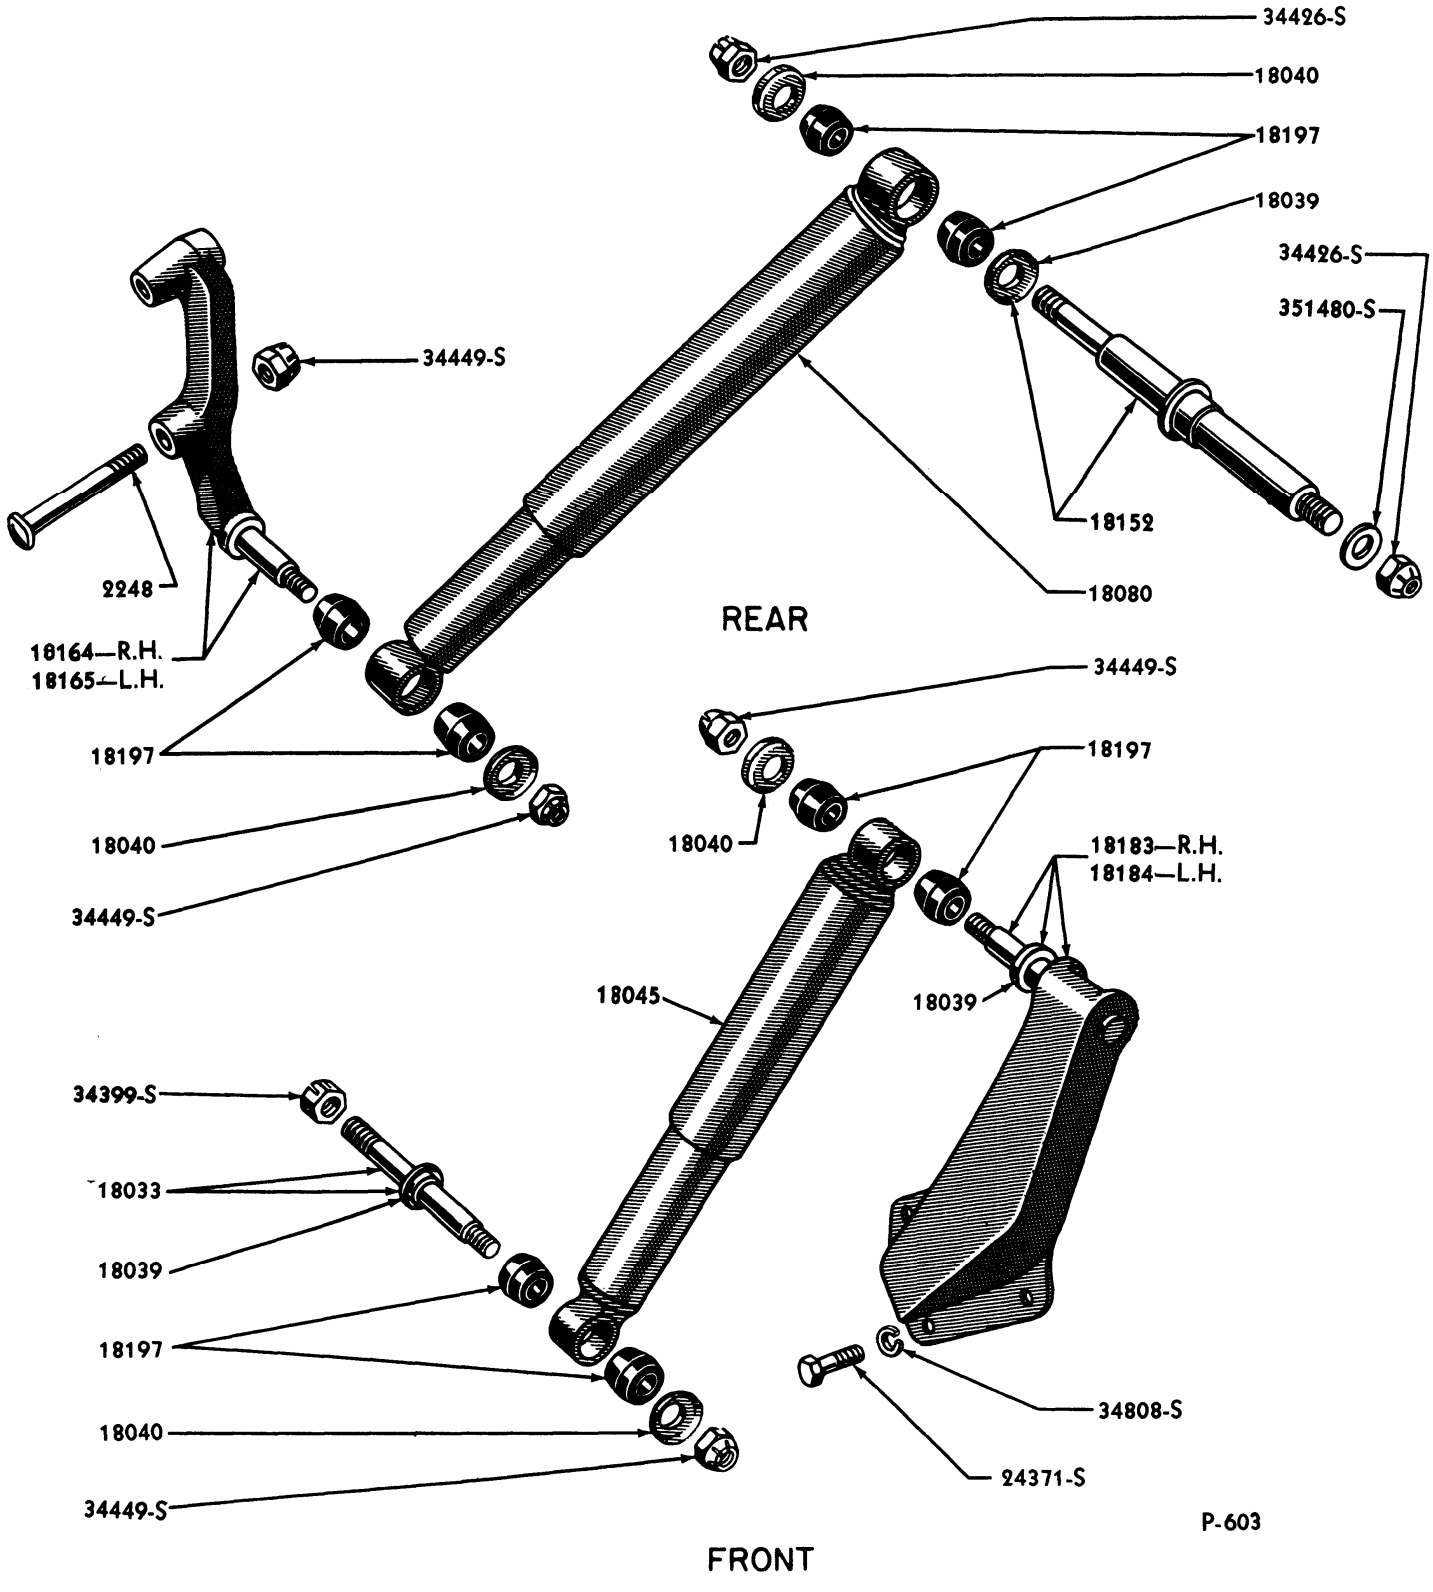


1947-48 DIRECT ACTING SHOCK ABSORBERS

Basic numbers only shown on illustration. Order by Part Numbers shown in list of parts.

COPYRIGHT 1949 FORD MOTOR COMPANY DEARBORN, MICHIGAN. ALL RIGHTS RESERVED.