
A13075C

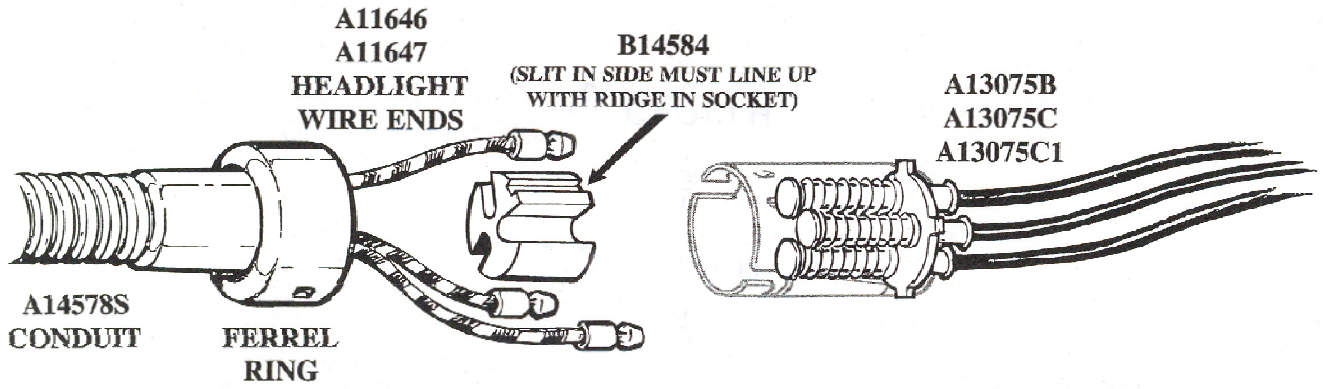


Step 1) Put wire into slots of B14584 so ends protrude 11/16 above end of B14584. Drill plastic deeper if necessary to get this dimension.

Step 2) Insert B14584 into A13075B, C, or C1, and secure by taking ferrel ring from A14578S sliding over A13075B, C, or C1 and twist 1/8 of turn locking all pieces into position.

Please note that the ferrel ring may need indents stamped in more firmly. Use a punch and make indent more visible to help in holding into position on socket. This original setup is prone to problems and many restorers feel it is easier and safer to use modern day connections such as a spade connector which gives you a better contact. Then the ferrel ring becomes cosmetic and not functional.

A13075C

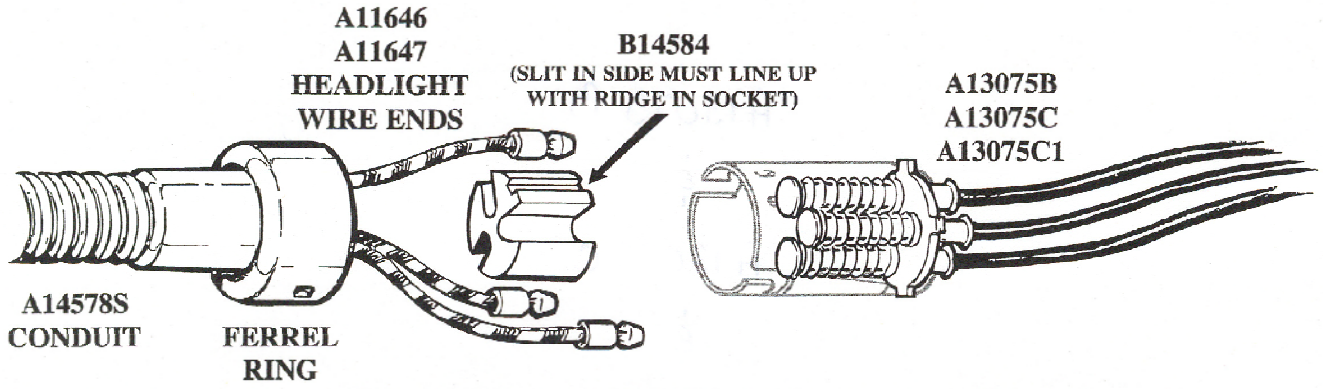

Step 1) Put wire into slots of B14584 so ends protrude 11/16 above end of B14584. Drill plastic deeper if necessary to get this dimension.

Step 2) Insert B14584 into A13075B, C, or C1, and secure by taking ferrel ring from A14578S sliding over A13075B, C, or C1 and twist 1/8 of turn locking all pieces into position.

Please note that the ferrel ring may need indents stamped in more firmly. Use a punch and make indent more visible to help in holding into position on socket. This original setup is prone to problems and many restorers feel it is easier and safer to use modern day connections such as a spade connector which gives you a better contact. Then the ferrel ring becomes cosmetic and not functional.