

HEADLIGHT WIRE ASSEMBLY

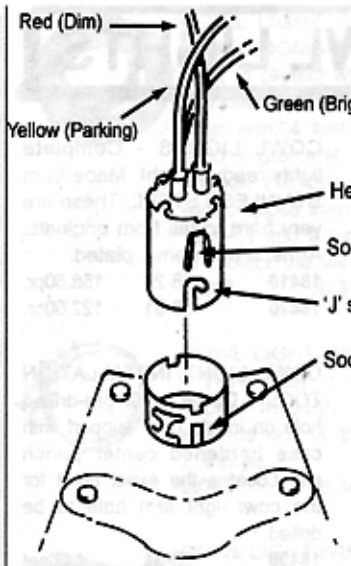

1. Align socket locking blade with headlight socket holder blade locking groove.
2. Insert headlight socket into socket holder. Push firmly until blade locks in groove.
3. To remove socket, depress socket locking blade with a small screw driver – Hold in and pull out socket.

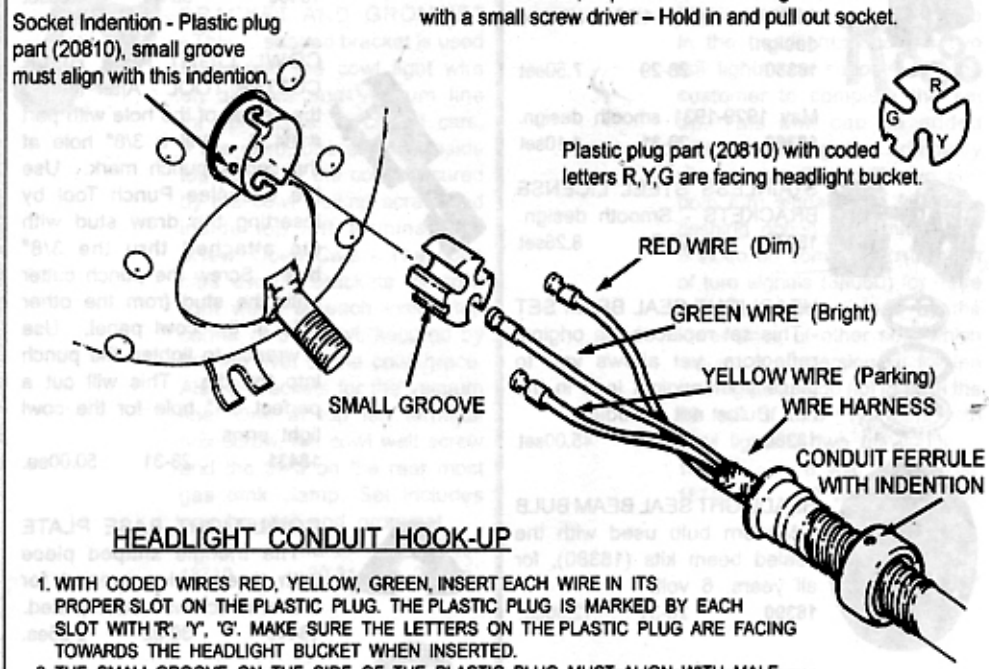

HEADLIGHT CONDUIT HOOK-UP

1. WITH CODED WIRES RED, YELLOW, GREEN, INSERT EACH WIRE IN ITS PROPER SLOT ON THE PLASTIC PLUG. THE PLASTIC PLUG IS MARKED BY EACH SLOT WITH 'R', 'Y', 'G'. MAKE SURE THE LETTERS ON THE PLASTIC PLUG ARE FACING TOWARDS THE HEADLIGHT BUCKET WHEN INSERTED.
2. THE SMALL GROOVE ON THE SIDE OF THE PLASTIC PLUG MUST ALIGN WITH MALE INDENTION ON THE HEADLIGHT SOCKET. (IT WILL ONLY INSERT ONEWAY).
3. SLIDE THE STAINLESS CONDUIT OVER THE WIRES WITH THE FERRULE PARTLY COVERING PLASTIC PLUG WITH CODED WIRES IN THEIR PROPER SLOT.
4. INSERT PLASTIC PLUG AND CONDUIT INTO HEADLIGHT SOCKET MAKING SURE SMALL GROOVE IN THE PLASTIC PLUG ALIGNS WITH THE HEADLIGHT SOCKET INDENTION.
5. ROTATE THE FERRULE ON CONDUIT WHEREBY THE INDENTIONS ALIGN WITH THE 'J' SLOT ON THE HEADLIGHT SOCKET - PUSH FIRMLY AND ROTATE CLOCKWISE TO LOCK CONDUIT FERRULE AND HEADLIGHT SOCKET TOGETHER.