
Chasing the jet threads:

The threaded bosses for the **main**, **cap**, and **comp** jets along with the threads for the **air-fuel mixture needle** are a special thread size. This also includes the **brass GAV valve seat threads** if one is installed. The thread size is a 5mm 75 pitch. It is prudent to clean these threads out with a proper size tap. **Do not** run the tap through the threads for the **idle** jet, as these threads are a tapered pipe thread. The 5mm 75 pitch tap shown in the photo has an extension handle attached; this is to allow access to the cap jet and the comp jet that are situated at a difficult angle that preclude the use of a standard tap holder tool.



Tap for jet threads with extension handle

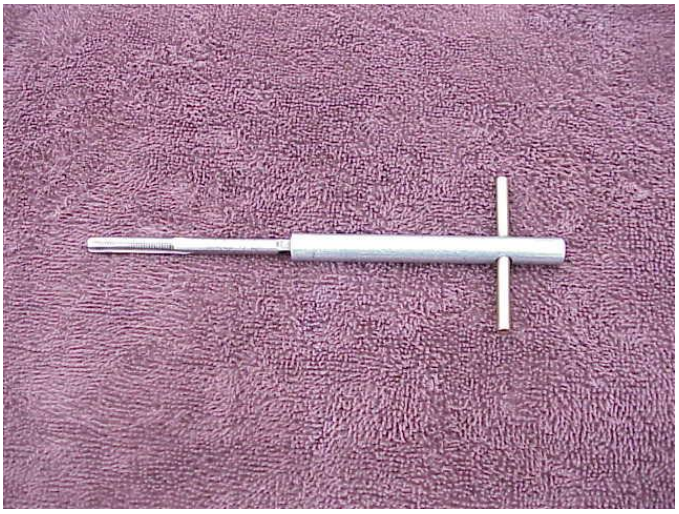

5mm 75 pitch special tap